

Installtion Guide(A200 Series)


Introduction

The A200 series is suitable for both wall mounting and tabletop use. Please refer to the following instructions.

Wall mounted


Step 1

Hold the mounting plate against the wall at the desired height (typically within the breathing zone, approximately 1.1 to 1.7 meters above the floor). Once positioned, use the supplied screws to firmly attach the plate to the wall.

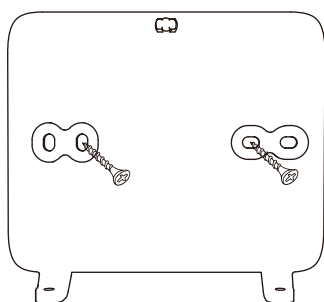



Step 2

Align the device with the top of the mounting plate, then slide it downward until it is firmly seated.

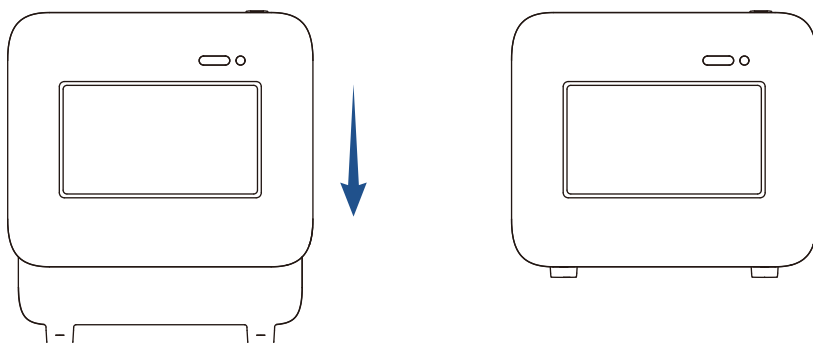

Step 3


Secure the device to the mounting plate using the provided screws.

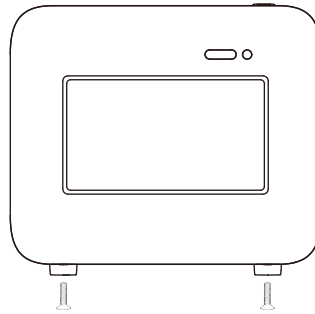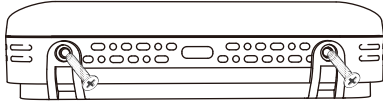

Tabletop use

Step 1

Slot the grooved section of one wooden piece into the groove of another to create a free-standing desktop unit.

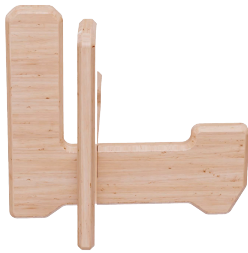

Step 2

Place the device on the desktop base. Route the connection cable beneath the unit through the designated opening.

